

# **ERDÉ Trailers Pty. Ltd.**

**ABN 46 130 072 678**


**ACN 130 072 678**



Tow hitch uncocked, you will not be able to hitch the trailer to the towball.



This is the tongue position when the hitch is uncocked.

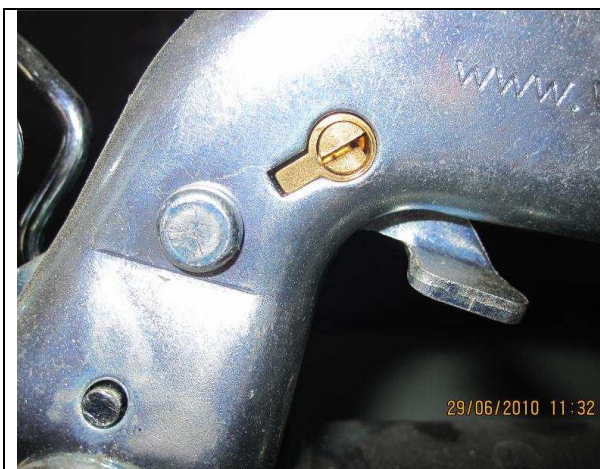


The barrel of the keylock is securing the trailer from opportunistic thieves.

# **ERDÉ Trailers Pty. Ltd.**

**ABN 46 130 072 678**

**ACN 130 072 678**

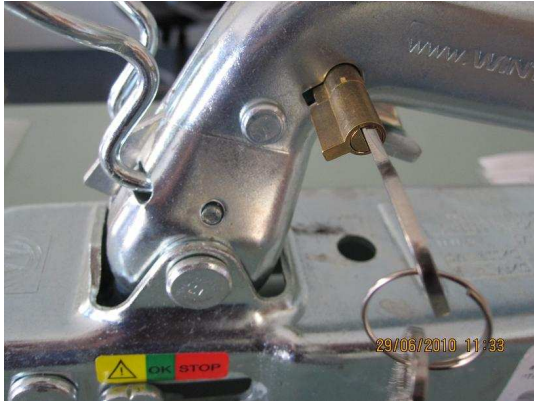

Before hitching the trailer you need to remove the barrel lock.



Tow hitch is ready for hitching to trailer. It is in the cocked position.



In order to fit the key lock (either on or off the vehicle) The tongue must first be released. Reach under the hitch and pull the tongue forward while simultaneously lifting up the handle and holding down the trigger. The tongue will release very easily.